

QUICK START AND USER MANUAL



RX-5 V2

BODY WORN CAMERA

WWW.REWIRESECURITY.CO.UK

Introduction

Thank you for purchasing a Rewire Security body worn camera. This guide details how to operate, configure and download data from the camera. Please keep this guide for future reference.

Charging

The camera should only be charged using the cable and charger supplied with the camera. We recommend charging the camera via the supplied charging dock. To charge the camera place the camera into the charging dock with the USB cable and plug connected. A full charge can take up to 5 hours depending on the camera's batteries current charge state.

Note- It is recommended to charge the camera before use and long periods of storage.

Camera Overview



Button Operation

Video Recording Button

- Press to start or stop recording from standby mode.
- Press and hold to enable and disable the cameras laser alignment tool from standby mode.
- Press and hold from off to switch on the camera and automatically start recording.

Photo Snap Button

- Press once to capture photos while in standby mode or recording video.

Power

- Press and hold to switch the camera on and off.

Back

- Tap to navigate back to the previous menu when in the settings or playback menu.

Menu

- Tap to enter the playback menu from standby mode or to confirm a selection in the settings or playback menu

Set

- Tap to enter the settings menu from standby mode.

Button Operation

Up

- Press and hold when in standby mode to enable or disable LED illumination.
- Press once to navigate up when in the settings or playback menu.

Down

- Press and hold to enable or disable infra-red night-vision when set to manual mode in the settings menu.
- Press once to navigate down when in the settings or playback menu.

Audio Record

- Press once to record audio only when in standby mode.
- Press and hold to switch on and automatically start recording audio only from off.

Playback

- Press once to enter the playback menu.

Passwords

The camera is supplied password protected by default. This is designed to prevent unauthorised access to recorded data and the cameras settings. The default password is '000000'. Use the Up and Down buttons to select a character and the 'Menu' button to confirm. The camera's password can be changed in the cameras settings menu.



Playback Menu

The camera has the ability to playback recorded footage directly on the camera via its in-built screen, this is done in the cameras playback menu. To enter the playback menu tap the 'Menu' button and enter the cameras password using the Up and Down buttons to select a character and the 'Menu' button to confirm. Recorded data in the playback menu is automatically sorted into three categories



Use the 'Up' and 'Down' buttons to select a category and 'Menu' button to confirm. Files are sorted in date order with the newest files first.

Video Category

Use the 'Up' and 'Down' buttons to cycle through the files and the 'Menu' button to select a file for playback. Tap the 'Back' button to go back to the previous menu.

When playing back a video use the 'Down' button to fast forward and the 'Up' button to rewind. The 'Menu' button is used to pause. Tap the 'Back' button to go back to the previous menu.

Photo Category

Use the 'Up' and 'Down' buttons to cycle through images and the 'Menu' button to enlarge an image. Tap the 'Back' button to go back to the previous menu.

Photo Category

Use the 'Up' and 'Down' buttons to cycle through the files and the 'Menu' button to select a file for playback. Tap the 'Back' button to go back to the previous menu.

When playing back an audio file use the 'Down' button to fast forward and the 'Up' button to rewind. The 'Menu' button is used to pause.

Settings Menu

To enter the settings menu tap the 'Set' button on the back of the camera while in standby mode. When prompted enter the cameras password using the Up and Down buttons to select a character and the 'Menu' button to confirm each one. While in the cameras settings menu use the Up and Down buttons to navigate through the different options and 'Menu' button to confirm and the Back button.

Resolution

Select the quality the camera records video in when the Video Recording Button is pressed. Choose between:

1296P30

1080P30

720P30

720P60

480P30

Photo Size

Select the quality of still images captured by the camera when the Photo Button is pressed. Choose between:

8M

12M

14M

34M

Photo Button

Choose how many still images are captured when the Photo Button is pressed. When Off is selected one image will be captured per press. Choose between.

OFF

3P

5P

10P

20P

Pre - Record

When On is selected the camera will buffer 15 seconds of footage at all times. When active a 'Blue Dot Icon' will be displayed on the cameras screen.



Post Record

Select how long the camera continues to record for after the **Video Recording Button** is pressed to stop recording. When **Off** is selected the camera will stop recording as soon as the **Video Recording Button** is pressed.

OFF 5 sec 30 sec 1 min 5 min

Video Quality

Select the bit-rate of the recorded video footage. When **High** is selected the recorded footage will be of a higher quality but will take more space on the camera memory.

Loop Recording

When **On**, the camera will record on a continuous loop and automatically record over the oldest data first.

Video Split Time

Select how long the camera records for before saving a new file.

5 min 10 min 15 min 20 min 30 min

LCD Auto Off

Select how long the camera screen is kept on in standby mode. When **Off** is selected the cameras screen will always stay on.

OFF 30sec 60sec

LCD Brightness

Select the brightness of the cameras built in screen. Choose between **High** and **Low**.

Auto Power Off

Select how long the camera stays on when not recording and in standby mode. When **Off** is selected the camera will stay on until switch off manually using the **Power Button**.

1 min 3 min 5 min OFF

Please note: When Motion Detection or Pre-Record are active the Auto Power Off feature will be over-ridden and the camera will stay on until switched of manually using the Power Button.

Key Tone

Enable/Disable audible button press tones

Vibration Reminder

Enable/Disable vibration feedback.

Mute Recording

When **On** the camera will record video without audio when the **Video Recording Button** is pressed.

Device Volume

Set the volume of the cameras in-built speaker.

Low

Medium

High

Vehicle Mode

When **On** the camera starts recording when the cameras USB port is connected to power and stops automatically when power is disconnected.

File Manager

Set how recorded media is displayed in the Media Playback Menu.

Photo Mode- Recorded media is displayed as thumbnails.

File Mode- Recorded media is displayed in list form.

Password

Enable/Disable the cameras password protection.

Change Passwords

Set a custom 6 character password for the camera. Use the **Up/Down** buttons to select a character and the **Menu Button** to confirm.

Change Super Password

Only used by Rewire Security engineers.

Night Vision

Switch between the cameras two night vision modes.

Manual- Infra-red night-vision is manually Enabled/Disabled by pressing and holding the **Down Button**.

Automatic- The camera will automatically switch on infra-red night-vision in low light levels. When infra-red night-vision is active the 'IR' icon will be displayed on the cameras screen.

Please note: When infra-red night-vision is active the camera will record in black and white

Default Settings

Reset the camera back to factory settings.

Date & Time

Set the time and date watermarked to recorded media.

DD/MM/YYYY

HH:MM:SS

Use the Up/Down Buttons to select a character and the **Menu Button** to confirm.

Please note: The time is set in 24hr format

Officer ID

Set a unique ID for the cameras operator.

Use the Up/Down buttons to select a character and the **Menu Button** to confirm.

Please note: This ID will be watermarked to all recorded videos and photos.

Officer ID

Set a unique ID for the cameras operator.

Use the Up/Down buttons to select a character and the **Menu Button** to confirm.

Please note: This ID will be watermarked to all recorded videos and photos.

Downloading To A PC

Recorded data from the camera can be downloaded to a PC or Mac via the charging dock. Only the original cable provided with the camera should be used. It is recommended to download all recorded data between uses.

To download data from the camera please follow the steps below:

1. Connect the camera dock to a computer using the USB cable provided. The LED status light on the dock will light up green.

2. Place the camera into the dock while switched off. The status LED will turn red and the camera will switch on.

3. Enter the cameras password via the cameras screen using the Up/Down buttons to select a character and the **Menu Button** to confirm

4. The camera will now appear as a removable drive on the computer. The files from the camera can now be downloaded from the camera for archiving.

5. Once finished it is important to safely eject the camera before disconnecting to avoid damage to the cameras memory. This is done by right clicking the cameras drive icon and selecting '**Eject**'.